

customisation

Embossed seats and backrests

Embossed seats/backrests can be used on selected models from the classical bentwood collection. Possibilities of the embossed seats/backrests are

listed in the price list. These seats and backrests are not subjected to a surcharge.



Embossed seat 202
Model 014, 018, 030, 033, 060, 073, 132, 134, 378, 503, 505, 523



Embossed seat 203
Model 004, 020, 024, 025, 054, 056, 130, 131, 135, 149, 150, 763, 769



Embossed seat 255
Model 004, 020, 024, 025, 054, 056, 130, 131, 135, 149, 150, 763, 769



Embossed seat 206
Model 014, 018, 030, 033, 060, 073, 132, 134, 378, 503, 505, 523



Embossed seat 209
Model 004, 020, 024, 025, 054, 056, 130, 131, 135, 149, 150, 763, 769



Embossed seat 256
Model 004, 020, 024, 025, 054, 056, 130, 131, 135, 149, 150, 763, 769



Embossed seat 219
Model 014, 018, 060, 073, 132, 134, 378, 505



Embossed seat 223
Model 004, 020, 024, 025, 054, 056, 130, 131, 135, 149, 150, 763, 769



Embossed seat 259
Model 014, 018, 030, 033, 060, 073, 132, 134, 378, 503, 505, 523



Embossed backrest 208
Model 054



Embossed backrest 223
Model 054

Glides

Glides protect the product material as well as the floor against damage, can reduce noise and help to make moving the chair on the floor easier, especially on carpets. Specify the required type of glides to suit your floor in your order. You can follow our recommendations, but please bear in mind that these are merely informative and not binding. If you are not sure which type of glides to

■ Type of glides - type of floor:

Teflon glides - laminate, cork and vinyl floors, tiles, carpeting, linoleum

Felt glides - wooden floors

choose, request an opinion from your floor covering supplier.

We supply felt glides in white or black colour.

Teflon glides are gentler on floors than other types of glides. They are suitable for laminate, cork and vinyl floors, tiles, carpeting and linoleum. We have Teflon glides in grey colour.

! We recommend that customers check the wear and condition of their furniture glides once every six months, especially with glides made from felt and Teflon. If glides need replacing, customers should contact their sales representative.

! Note that dimensions of the products are given without the glides. The glides can thus additionally affect the overall height and the height of the seat by 4-12 mm.

! Our offer includes products that have a pre-determined type of glides or products where a standard glide cannot be offered (the Kontor_503 & 523, swivel chair, the Piano_505 swivel stool, rocking chairs, coat stands, benches, etc.).

! The quality warranty cannot be applied to wear of glides when used in unsuitable conditions or at excessive load (unevenness of the floor, rustic character of the floor, perpendicular direction of the planks in the floor to the direction of chair movement, etc.).

Felt glides



Teflon glide



(illustrative image)

Cane weave

Cane weave has been used in an almost unchanged form since the revival of the technique at the turn of the twentieth century. Chairs made from bentwood with cane seats or backrests are light, airy and comfortable to sit on, especially in the summer. The cane weave is made from purely natural material, is easy to maintain and can be renovated at any time. Today, ready-made cane sheets are used instead of hand-weaving. These are made from the inner part of the stem of rattan liana from the forests of Southeast Asia. Before being processed, the cane sheet is moistened to become flexible and then it is pressed into a groove in the seat or backrest by twisted rattan strings. Drying up, the weave shrinks back to its original size. Rattan fibres natu-

rally split and fray. However, during the processing, the weave surface is cleaned up with a special electric machine. We offer the cane weave in natural or Antique finish.

To increase the strength and durability of natural cane weave, we recommend application of additional plastic weave (reinforcement mesh). The reinforcement mesh is stable, holds its shape and prevents excessive stretching of the cane weave on the seat, which may eventually lead to rupture. The additional mesh can only be used on the seat. We offer the mesh in black and white colour for a surcharge specified in the price list. Due to technological reasons, only black reinforcement mesh is available for the cane seat in Antique finish.



Top side (without mesh)



Top side (without mesh)



Top side (with white mesh)



Top side (with black mesh)



Underside (with white reinforcement mesh)



Underside (with black reinforcement mesh)

! We provide a warranty in accordance with the GTC for products with cane components.

! To protect the fibres from cracking and the weave from getting damaged, do not expose cane products to high temperatures and low air humidity.

! Both versions of the cane weave can be treated following the guidelines specified in the Furniture Care & Maintenance manual. Neither of the versions should be subjected to excessive pressure in one spot to prevent rupture of the weave.

! For commercial premises where products are exposed to heavy use, we recommend use of reinforcement mesh underneath the cane weave.

! The reinforcement mesh cannot be supplied on orders to Germany, Austria, Belgium, Switzerland, Luxembourg, the Netherlands and Liechtenstein.

! Just like the wood in our products, cane is a natural material with slight colour variations. Possible darker colouring of the cane weave (including of individual fibres) is not a defect and therefore not a cause for complaint. Indeed, it is proof of the material's natural origin.

! Antique cane weave incurs a surcharge that is specified in the price list next to the heading Antique.

! Antique cane weave can only be used with products finished with stains B4, B105, B112, B123, B130/A.

Barstools

All our barstools are also available in lower versions, which may be appreciated especially by people who wish to use them at their kitchen counters. The reduced sitting height has been selected with respect to the chair's construction, safety and aesthetic appearance. In your order, simply state whether you want a high or a low barstool. Prices and surcharges are identical for both versions. Dimensions are listed in the technical information in the price list.

■ Footrest plate

With most barstools we offer a steel footrest plate in black or silver colour to protect the footrest from wear. This option incurs a surcharge. The shape and quantity of required plates varies by model. The surcharge stated in the price list is always for the full quantity required for the selected product.



Footrest plate

! With the Rioja and Prag barstools, the price is for 4 footrest plates; with the Stockholm barstool it is for 2 plates. The number of footrest plates is determined by the number of directions from which one can be seated on a specific barstool.



Connection into rows

Merano chairs are offered with a simple **Merano link** connecting set. Individual parts of the set are placed on the side of the backrest support legs

and may be easily linked or unlinked. The connecting set enables stacking of the chairs. The surcharge per one set is listed in the price list.

■ Side cover

In addition to the connecting set, we also offer covers for the connection parts of the first and last chairs in the row. The covers can be marked with laser-cut numbers that designate the order

of individual rows. The covers are supplied in the same colour finish as the chairs. The cover can be found in the price list under reference number 309 279. The price is quoted per one set.



Side cover



Connection into rows – detail

Transport trolleys

For transport of stacked Merano chairs and P.O.V. stools we recommend the use of specially designed transport trolleys.

■ Merano trolley

The trolley will carry up to 14 non-upholstered chairs and will move through doors that are at least 60 cm wide. The back wheels are easily lockable. The trolley is available only in B123-black grain finish and can be found under code 799 405 in the price list.



! If the Merano chairs are standing on the floor, they can be stacked up to a maximum of 5 chairs.

! The total height of the Merano trolley with stacked chairs with veneer seat is 200 cm.

■ P.O.V. stool trolley

This minimalist, discreet trolley can stack up to 10 stools. The trolley is 40 cm wide, making it ideal for narrow spaces, and comes equipped with swivel wheels for easy movement. The trolley is available in B123-black grain finish and can be found under code 799 458 in the price list.



! The total height of the P.O.V. trolley carrying 10 non-upholstered stools is 168.5 cm; the total height with 10 upholstered stools is 183 cm.

Stackability

Some chairs, armchairs or barstools can be stacked one on top of the other. In the price list, stackability is marked by a number, which represents the maximum quantity of stacked chairs. As a standard, products with veneer seats are supplied with plastic stops, which significantly decrease the risk of damage in the course of frequent handling.



! Pressure marks on upholstered seat or backrest caused by stacking cannot be subject to a claim.

Interlays

To prevent the creation of pressure marks on upholstered seats as a result of stacking, we recommend the use of wooden interlays. These have been created for the Bergamo, Treviso, Lyon, Merano, Stockholm and Valencia models.




Ornaments

Another option how to change appearance of a standard design of respective models is the application of the ornament on the chair backrest or seat (engraving). Engraved ornaments are made by laser on the outer side of the backrest into the depth of approximately 1 mm. This option can give some kind of originality to the

product, which may be interesting especially for gastronomic facilities. Engraving is done at customer's request. For engraving surcharges listed in the price list, the minimum order is 20 pieces. Engraving is also possible on smaller orders, with surcharge calculated on a per-order basis.

! When ordering ornaments, please specify their size and placement. Lead time and price for application of more complex designs are subject to an individual agreement.

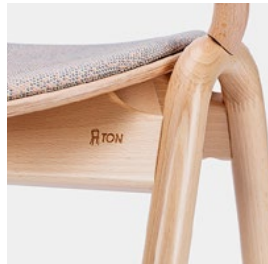

Detail of engraving – light colour finishes



Detail of engraving – dark colour finishes

Ready-to-ship products


Our most popular products are often in stock and ready to ship. We recommend monitoring current stock levels on our website or contacting a sales representative. Ready-to-ship products are fitted with Teflon glides, which are suitable for most types of flooring. Teflon glides can be exchanged

for other types of glides or footrest plates for an additional cost of 6 Euro per chair. Some of the ready-to-ship products can also be upholstered. If the chosen upholstery material is in stock, the finished product can be shipped within 2-3 weeks.

Leg connections

You can find codes of leg connections in the description of models in our sales quotes, order confirmations and other documents. We show their schematic drawings for illustration.

! As part of ongoing care for your furniture, we recommend that you regularly check and, if necessary, tighten the screws. At a minimum, this should be done once every six months.

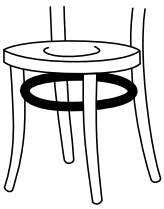

01
Chair: 060, 811
Children's chair: 014
Armchair: 004, 020, 030, 033, 811
Barstool: 372, 438, 439, 691



02
Chair: 004, 014, 018, 020, 378



22
Chair: 020, 054, 056, 150, 763, 769
Armchair: 020, 024, 025



23
Chair: 020, 054, 056, 763, 769
Armchair: 020



27
Chair: 004, 014, 018, 020, 056, 150, 378, 763, 769, 811
Armchair: 004, 020, 024, 025, 030, 033, 811



28
Chair: 004, 014, 018, 020, 054, 056, 378, 763, 769
Armchair: 004, 020



49
Barstool: 130, 131, 135



50
Barstool: 130, 131




51
Barstool: 130, 131, 135



52
Barstool: 130, 131



55
Barstool: 132, 134, 149, 813

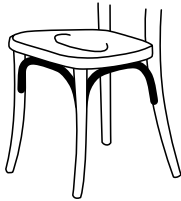


62
Chair: 763
Armchair: 024, 025



63
Chair: 763



64
Barstool: 132, 134

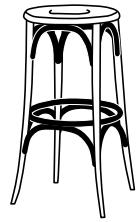

70
Barstool: 073




91
Barstool: 813



14
Chair: 488



37
Chair: 382, 516, 710, 713

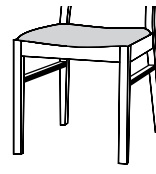

37
Chair: 514

We recommend that customers consult with us leg connections in advance.